

### Boundary Printing (App Version 2.9 and above)

**N.B. If a boundary map was created using an App Version lower than 2.9 then it will need to be remapped to create a printable report.**


- 1) Once the boundaries to be printed have been mapped (as per 'Quick Start guide'), take the tablet and USB cable to a Windows PC.
- 2) Fit the USB cable into a spare slot on the PC and ensure the other side is connected to the tablet.




- 3) With the tablet power on, navigate to the BlackBox Air+ home screen.



- 4) Using your finger swipe down in the top left of the screen to display the Android navigation bars.

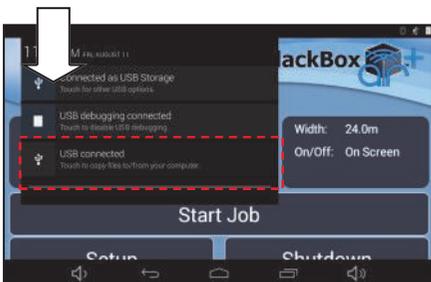

- 5) Swipe down in the top left a second time to display the USB options and from the list press on **USB Connected**.

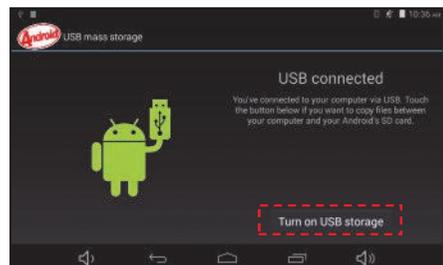

- 6) An app called 'Android USB Mass Storage' will open, press **Turn on USB Storage** and press **OK** to the message box.

