

Installing the Unit

Guidance Screen

Mount to the windscreen using suction mount and ram arm, or unscrew the ball from the suction mount and use this for a permanent fixture.

Touch Screen →

Brightness →

Power On/Off →



Magnetic Receiver

Install on the roof of the vehicle with arrow pointing to the front (if the roof is not metal use the roof mount plate supplied).



12v DC Plug

Plug into 3 pin socket on vehicle. If hard wiring do not remove the fuse.



Warranty Void if suction mount fails !! - Its is advised that the suction mount is removed from the windscreen when the unit is not in operation and reattached on a day to day basis.


For a more permanent fixing please detach the ram ball from the suction mount and secure down in the vehicle.

Warning – Please disconnect the unit from the power supply, if you need to jump start your vehicle.

Setup

When launching the BlackBox for the first time the 'Setup Wizard' will guide through the essential settings ready for guidance and area measurement.

Navigation Bar

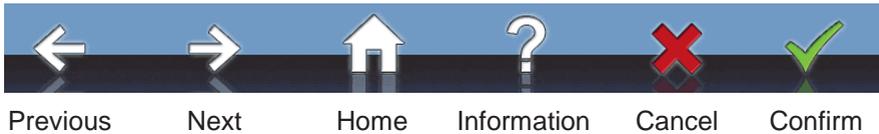

N.B. The wizard can be re-accessed via **Setup > Unit Setup > Run Initial Setup Wizard**.

Starting a Job

- 1) Press **Start Job**.
- 2) Enter the working **Width**.
- 3) Select the **Guidance Mode**.
- 4) Press **Confirm** to begin job.



Guidance Modes

Straight - Sets a straight guidance line between set point A and point B, which is then replicated both sides of the original line at equal intervals based on the entered width.

Curved - Creates a curved guidance line based on the path driven between set point A and point B. The line is then replicated both sides of the original line at equal intervals based on the entered width.

Adaptive Curve - Automatically adjusts the guidance line based on the previous pass.

Note : For the adaptive curve mode to work correctly an A and B point must be set as with 'Curved' and the pass next to the previous one needs to be followed.

Guidance Screen



Information Panel



Measuring the Area of a Field

1) After starting a new job, position your vehicle at the edge of the field and press the **Start/Pause Boundary**.

2) Change the settings as required:-

Boundary Type – set to Boundary.

Offset – the distance that the antenna is from the field edge.

Direction – Where the edge of the field is when you are facing forward.



3) Press **Start** and drive around the field edge until the start point is reached. The BlackBox will automatically close and save the boundary map, displaying the field shape and area size in the mini map. If the boundary doesn't close, press the **Close Boundary** button.

N.B. During the boundary run the boundary recording can be paused and restarted using the **Start/Pause Boundary** button, if there is a need to drive around obstacles.

To do a new boundary map redo steps 1) to 3).

Setting and Using a Guidance Line

1) Position the vehicle in the field where the job will begin. (When using a curved line it is important to use the longer edge of the field to set a guide line).

2) At the beginning of a straight run press the **Grid area** to set point A.



3) Drive to the end of the run and press the **Grid area** to set B. The guidance line will appear ready for guidance.



4) If working the headland pass, continue around then line up to the set AB line and use the guidance to work the inner areas of the field.



5) When turning in the headland the next AB line will appear.



Pressing the **Grid area** a third time allows the guidance line to be reset and also if using the 'Straight' guidance mode, recalibrated to align with current location.

N.B. The green coverage recording can be turned off and on using the 'Recording On/Off' button or selected method.

Finishing a Job

To complete a field boundary map or guidance job to start a new one, press the **Menu** button and then **Finished Job**. This returns to the BlackBox menu screen where a new job can be started by pressing **Start Job**.

To power off the BlackBox press **Shutdown**, then press **Yes** and disconnect from power supply.