




Installing the Unit

Guidance Screen

Mount to the windscreen using suction mount and arm.

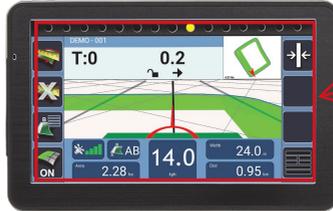

Touch Screen



Magnetic Antenna

Install centrally across the width of the roof (if the roof is not metal use the roof mount plate supplied).



12v DC Plug

Plug into 3 pin socket on vehicle.

USB Power Socket

Charge the screen via supplied USB Cable.
It is recommended that the charge cable is always connected to the screen whilst in use.

Warranty Void if suction mount fails !! - Its is advised that the suction mount is removed from the windscreen when the unit is not in operation and reattached on a day to day basis.


For a more permanent fixing, a mounting kit that can be secured to the vehicle is available for an additional cost.

Warning – Please disconnect the unit from the power supply, if you need to jump start your vehicle.

Setup

When launching the BlackBox for the first time the 'Setup Wizard' will guide through the essential settings ready for guidance and area measurement.

Navigation Bar

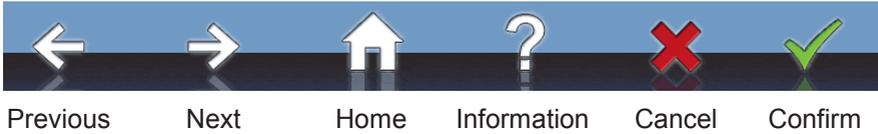

N.B. The wizard can be re-accessed via **Setup > Unit Setup > Run Initial Setup Wizard**.

Starting a Job

N.B. Before starting a job it is important the correct Bluetooth device is selected and that the GPS Quality level is within the green. This ensures the best GPS performance for use with guidance and area measurement.



1) Press **Start Job**.



2) Enter the **Farm/Field** name and **Confirm**



3) Enter working **Width**, then select the **Guidance Mode** and press **Confirm** to begin job.

Guidance Modes

Straight - Sets a straight guidance line between set point A and point B, which is then replicated both sides of the original line at equal intervals based on the entered width.


Curved - Creates a curved guidance line based on the path driven between set point A and point B. The line is then replicated both sides of the original line at equal intervals based on the entered width.

Guidance Screen

Start/Pause
Boundary

Close
Boundary

Recording
On/Off

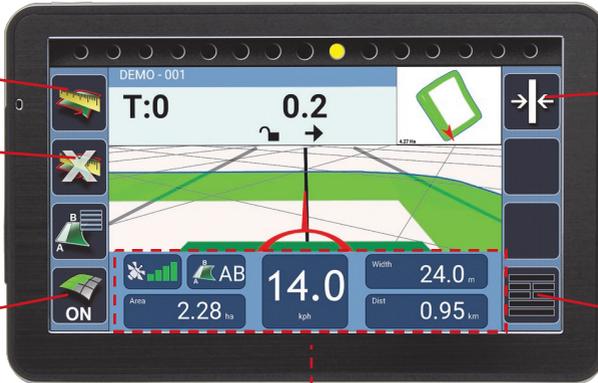

Recalibrate
Guidance line
(Straight Mode
only)

Menu

Information Panel

Guidance Status Speed (Toggle Speedometer / Digital)

GPS Strength

Coverage Area



Distance Travelled

Measuring the Area of a Field

1) After starting a new job, position your vehicle at the edge of the field and press the **Start/Pause Boundary**.

2) Change the settings as required:-

Offset – the distance that the antenna is from the field edge.

Direction – Where the edge of the field is when you are facing forward.



3) Press **Start** and drive around the field edge until the start point is reached. The BlackBox will automatically close and save the boundary map, displaying the field shape and area size in the mini map. If the boundary doesn't close, press the **Close Boundary** button.

N.B. During the boundary run the boundary recording can be paused and restarted using the **Start/Pause Boundary** button, if there is a need to drive around obstacles.


To do a new boundary map redo steps 1) to 3).

Setting and Using a Guidance Line


N.B. The green coverage recording can be turned off and on using the 'Recording On/Off' button or selected method.

1) Position the vehicle in the field where the job will begin. (When using a curved line it is important to use the longer edge of the field to set a guide line).

2) At the beginning of a straight run press the **Grid area** to set point A.

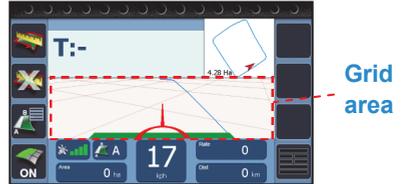

3) Drive to the end of the run and press the **Grid area** to set B. The guidance line will appear ready for guidance.

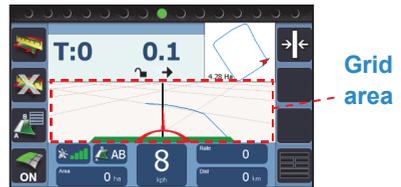

4) If working the headland pass, continue around then line up to the set AB line and use the guidance to work the inner areas of the field.



5) When turning in the headland the next AB line will appear.



Pressing the **Grid area** a third time allows the guidance line to be reset and also if using the 'Straight' guidance mode, recalibrated to align with current location.

Finishing a Job

To complete a field boundary map or guidance job to start a new one, press the **Menu** button and then **Next Job** to do a different job with the same settings or **Finished Job** to return to the Start menu.

To power off the BlackBox press **Shutdown**, then press **Yes** and disconnect from power supply.